



The ENVI-CPC 100 is a butanol-based particle counter with high efficiency for monitoring ultrafine particle (UFP) concentrations in the ambient air. The Model 100 is designed for typical concentrations of up to 10^5 particles/cm³. It is part of our modular nanoparticle measurement system. It can be combined with different systems for measuring the size distribution and concentration of UFP (Scanning Mobility Particle Spectrometer / Mobility Particle Size Spectrometer). The patented evaporator and condensation module is maintenance-free. This allows continuous operating times of up to one year without maintenance and cleaning - unique.

The system meets the requirements of the current standard CEN / TS 16976:2016 (Harmonized measurement of number concentrations using CPC) in all areas. It can be operated directly with a NAFION® based sampling system if desired. The pumps required for this are already integrated.

DESCRIPTION

The ENVI-CPC 100 is a butanol-based particle counter with high efficiency for monitoring ultrafine particle (UFP) concentrations in the ambient air. The Model 100 is designed for typical concentrations of up to 10^5 particles/cm³. It is part of our modular nanoparticle measurement system. It can be combined with different systems for measuring the size distribution and concentration of UFP (Scanning Mobility Particle Spectrometer / Mobility Particle Size Spectrometer). The patented evaporator and condensation module is maintenance-free. This allows continuous operating times of up to one year without maintenance and cleaning - unique.

The system meets the requirements of the current standard CEN / TS 16976:2016 (Harmonized measurement of number concentrations using CPC) in all areas. It can be operated directly with a NAFION® based sampling system if desired. The pumps required for this are already integrated.

NANOPARTICLE COUNTER FOR AMBIENT AIR MONITORING WITH INTEGRABLE NAFION® AEROSOL DRYER

The aerosol pre-dried by the NAFION® dryer is fed directly to the evaporator unit by the internally adjustable and controlled diaphragm pump, which is saturated with the working liquid n-butanol.

The butanol flows in a spiral trough inside the cylinder to the base of the evaporator.

The non-evaporated residue is pumped back into the reservoir by a second pump. This actively ensures permanent saturation of the evaporator and simultaneously prevents deposits from forming on the inner walls. In contrast

to a control with a critical nozzle, contamination of the system cannot lead to a drop in the volume flow. This is especially important for long-term measurements in the ambient air. The user can calibrate the volume flow.

The detection of the condensed particles is done by an optical sensor, which determines the concentrations and size distribution of the condensed particles and thus allows a simple and efficient quality control.

In addition to the usual factory calibration and adjustment of the cut-off according to CEN / TS 16976, Palas® offers certification of the instrument at the WCCAP (World Calibration Center for Aerosol Physics at the Leibniz Institute for Tropospheric Research).

The ENVI-CPC system has a 7" touch display for visualization and control. The system supports a standardized interface with different remote control and network application protocols, e.g., Modbus and Bayern-Hessen protocol. All necessary calculations and evaluations are performed directly on the device. A laptop for monitoring, changing settings, or visualization is not needed.

Comparison measurements

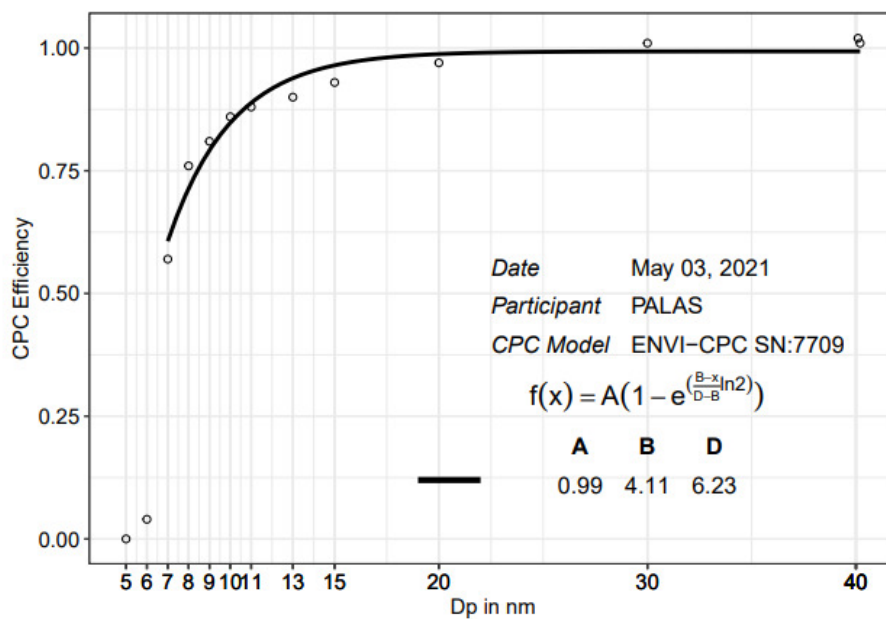


Fig. 1: Counting efficiency curve of the ENVI-CPC system measured at the Leibniz Institute for Tropospheric Research

Extensions/Accessories

The ENVI-CPC system can be equipped with a meteorological sensor that monitors temperature, pressure, humidity, wind speed, wind direction, and precipitation type and intensity of the outdoor air. A climate-controlled weather protection enclosure is available.

BENEFITS

- The unique, patented way of providing the working fluid for unattended operation for months
- Integrated computer with 7" touch screen
- Intuitive user interface with sophisticated software for data evaluation
- Integrated data logger
- Limitless, integrated network connectivity that supports remote operation and data storage on the internet
- Powerful software package

DATASHEET

Measurement range (number C_N)	10^5 particles/cm ³ (single count mode), $10^5 - 10^7$ particles/cm ³ (nephelometric mode)
Measurement range (size)	4 – 5,000 nm
Detection efficiency (at low particle size)	D50 = 7 +/- 0,7 nm; D90 < 14 nm
Volume flow	0.9 l/min
Data acquisition	Digital, 20 MHz processor, 256 raw data channels
Light source	Long term stable LED
User interface	Touchscreen, 800 • 480 pixel, 7" (17.78 cm)
Weight	Approx. 10 kg
Accuracy	5% (single count mode), 10% (nephelometric mode)
Response time	$t_{90} < 3$ s
Operation liquid	Butanol
Installation conditions	+10 – +30 °C (others on demand)
Interfaces	USB, Ethernet (LAN), RS-232/485
Power supply	115 – 230 V, 50/60 Hz
Dimensions	330 • 380 • 240 mm (H • W • D)
Data Management	Prepared for connection to the Palas®Cloud MyAtmosphere ("MyAtmosphere-ready"); internet access and separate registration required. MyAtmosphere terms and conditions of use apply.

CASE STUDIES

- Aerosol Research
- Environmental measurements
- Environmental monitoring measurement networks
- Workplace safety and occupational exposure studies
- Traffic emission monitoring
- Health studies
- Mobile aerosol studies



Mehr Informationen:
<https://www.palas.de/product/envicpc100>