

TROLEX

DATA & CHARGING DOCK

QUICK START GUIDE

Register your warranty online
at www.trolex.com/register

XXD1⁺

1. CONNECT

Connect your **XKD1+** data dock to your local Mac or PC device via USB.



2. POWER


Using the supply power cable and transformer connect your data dock to a permanent power supply.



3. DOWNLOAD

Download the **BreathelITE** software on to your PC or laptop.

trolex.com/breathelite-download

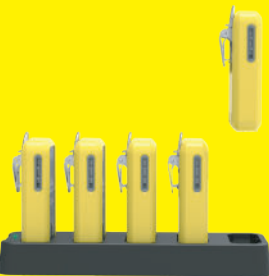

4. DOCK XCD1⁺

Place your **XCD1⁺** into the dock to begin charging.

5. GRAB AND GO

Once the battery icon turns green, your **XKD1⁺** is charged and ready to use.




6. COLLECT DATA

Re-dock your **XKD1⁺** after each use to re-charge and **BreathELITE** will automatically download your data.

7. REVIEW

Connect to **BreatheLITE** via USB to review, analyse and download device data.

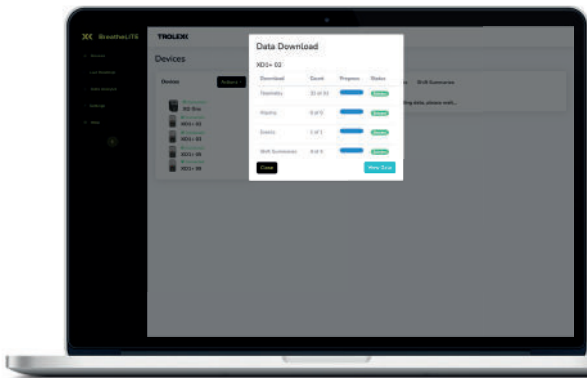



Scientific & Environmental Monitoring Technologies

Email: sales@alphascientific.com.au
Website: www.alphascientific.com.au

Melbourne Office

Phone: (03) 9124 9886

